


MatchRight MatchGUN

INSTRUCTIONS DF-MR007

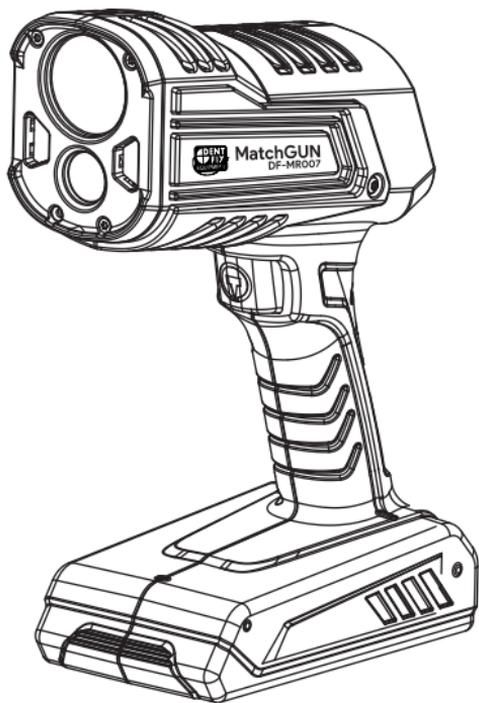

EN OPERATING INSTRUCTIONS DF-MR007



Thank you for choosing  MatchRight color matching lights. Please review the following instructions to achieve the best results and maximizing the functionality of the product. **Please retain this instruction manual for future reference.**

TECHNICAL DATA

Light Source	High CRI five color COB LED- Main Light 3W UVA LED - UV Light
Luminous Power	approx. 300-2400lm - Main Light approx. 365nm - UV Light
Operating Time	approx. 1.5-12.5hours - Main Light approx. 19hours - UV Light
Battery Specification	Li-ion 11.1V 5200mAh, 57.72Wh
Charging Time	approx. 3 hours
Charging Input	DC 15V1.5A
Degree of Protection:	IP20, IK02
Operating Temperature:	15°F to 105°F (-10 °C to +40 °C)

WARNING

- Do not open the device.
- Do not look directly into the light emitting lamp - Risk of eye injuries!
- Do not operate in direct sun light or extreme temperature conditions.
- Operating temperature, 15°F to 105°F (-10 °C to +40 °C).
- Keep away from children! Children should be supervised in order to ensure that they do not play with the device. This is not a toy!

OPERATING PROCEDURE

- DF-MR007 Operating Mode
 - Press the Main Button  first time, the whole light powers on.
 - Press the Trigger Switch  to turn the light on and cycle through the CCT in the following order: 2700K→3500K→4500K→5500K→6500K→off
 - Press the Button "  " or "  " to adjust the brightness with 300lm-600lm-1200lm-1800lm-2400lm
 - Press the "  " button to switch to UV mode and activate the UV light by pressing the Trigger Switch .
 - The light has memory function, the brightness and color temperature remain the same as before when you turned off and turned on again.
 - Press the Main Button  to power off.

CHARGING PROCEDURE

- **WARNING: ONLY USE THE USB CHARGER INCLUDED TO CHARGE THE LAMP**
The use of a NON-recommended charger can cause damage to the lamp or potentially cause a fire.
- Before first use, charge the lamp for 4-5 hours.
- Switch lamp off during charging, and connect the charger to the light or wall mount.
- The battery indicator will blink during charging.
- The battery indicator will stay lit after the lamp is finished charging.
- If the battery indicator did not light up, please remove the charger and try again.
- Fully charge the hand lamp before an extended period of storage.

Problem	Possible Cause	Reason/ Solution
The light does not turn on and only shows "  " when pressing the main switch	Your light went into the safe protection mode to protect the light from false triggering	Double click the main button to unlock the light
No response when pressing the trigger switch	MAIN Button did not turn on	Press the MAIN button until the screen is on and then press the trigger switch
The color light did not work when the trigger was pressed	The light is set in UV mode	Press the SET button and change to color light mode
The light does not work.	The built-in battery is not charged. Low voltage protection has tripped.	Recharge the light with original 15V1.5A charger
The light will not charge. The battery indicator or screen does not come on.	Is the cable or charger damaged ?	Check the charger and cable, use a proper charger
	Is the cable or charger properly connected to the work light ?	Check the charger base.
	Is the cable or charger properly plugged into an electrical socket ?	Check the socket connection
	Is the wall socket or extension cord live ?	Check the connection to power.
	If you are using another charger, is this the output 15V DC?	If not original, check the data and make sure same output rating.

! SAFETY INSTRUCTIONS

- Do not use the device if there is damage to the housing, plug or cable.
- Do not open the device! Return to manufacturer for repair.
- There is a risk of short-circuit. Repairs on the device may only be carried out by commissioned and trained persons. Please contact Dent Fix Equipment.
- Carry out cleaning tasks only when the unit is unplugged from power!

- Protect the battery against heat caused by against sunlight and fire. Danger of explosion.
- Keep away from excessive moisture. Do not immerse in water.
- If the battery is damaged or not charged correctly, dangerous fluids can leak from the battery. Avoid contact with these fluids because they can lead to skin irritations and severe burns. If you happen to come in contact with these fluids rinse off immediately with soap and water. Seek medical help immediately if the fluids make contact with your eyes or mouth.
- Lamp Lens will heat up and become hot after being on for a short period. **DO NOT TOUCH THE LAMP LENS TO ANY SURFACE AFTER BEING ON or AFTER BEING TURNED OFF UNTIL LENS IS COOLED.**
- Risk of eye injury! Do not direct light at eyes or permanent eye injury and blindness may occur.

Environmental Protection

- The device should not be discarded in the normal household waste under any circumstances.
- Dispose of the device via an authorized disposal center or your communal waste disposal facility. Observe the current applicable regulations. Contact your waste disposal facility in the event of any doubt. Dispose of all packaging materials via an environmentally friendly disposal facility. Rechargeable batteries must not be disposed of in the household waste. Return used rechargeable batteries to your dealer or hand them in to a battery collection facility.



WARRANTY

- The device has a one year WARRANTY against faulty workmanship or materials. The guarantee does not apply to damage to the device arising through a failure to comply with the operating instructions.



**DENT FIX EQUIPMENT
FAMILY BRAND**



Dent Fix Equipment

Gardena, California

 (310) 349-1940

 www.dentfix.com

 info@dentfix.com